



Installation manual

Daikin Altherma 3 R



ERGA04EAV3
ERGA06EAV3H
ERGA08EAV3H
ERGA04EAV3A
ERGA06EAV3A
ERGA08EAV3A

Installation manual
Daikin Altherma 3 R

English

CE - DECLARACIONE DE CONFORMIDAD
CE - DICHIARAZIONE DI CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΠΛΗΡΩΣΗΣ
CE - CONFORMITÄTSERKÄRNING

01 continuation of previous page
02 Fortsetzung der vorherigen Seite:
03 suite de la page précédente:
04 vervolg van vorige pagina:

01 Design Specifications of the models to which this declaration relates:
02 Konstruktionsspezifikationen der Modelle auf die sich diese Erklärung bezieht:
03 Specifications of conception des modèles auxquels se rapporte cette déclaration:
04 Ontwerpspecificaties van de modellen waarop deze verklaring betrekking heeft:
05 Especificaciones de diseño de los modelos a los cuales hace referencia esta declaración:
06 Specifiche di progetto dei modelli cui fa riferimento la presente dichiarazione:

01 - Maximum allowable pressure (PS): <PS> (bar)
- Maximum allowable temperature (TS):
* TSmn: Minimum temperature at low pressure side <L> (°C)
* TSmx: Saturated temperature corresponding with the maximum allowable pressure (PS): <P> (°C)
- Refrigerant: <R>

- Setting of pressure safety device: <P> (bar)
- Manufacturing number and manufacturing year: refer to model nameplate
02 - Maximum zulassung Druck (PS): <P> (bar)
- Minimalmaximal zulassung Temperatur (TS):
* TSmn: Mindesttemperatur auf der Niederdruckseite <L> (°C)
* TSmx: Sättigungstemperatur die dem maximal zulässigen Druck (PS) entspricht: <P> (°C)
- Kältemittel: <R>

- Einstellung der Druck-Schutzvorrichtung: <P> (bar)
- Herstellungsnr. und Herstellungsjahr: siehe Typenschild des Modells
03 - Pression maxima admissible (PS): <P> (bar)
- Température minimum/maximum admissible (TS):
* TSmn: température minimum côté basse pression: <L> (°C)
* TSmx: température saturée correspondant à la pression maximale admissible (PS): <P> (°C)
- Réfrigérant: <R>

- Régulation du dispositif de sécurité de pression: <P> (bar)
- Numéro de fabrication et année de fabrication: se reporter à la plaque signalétique du modèle
04 - Máxima máxima admissible temperatura (TS):
* TSmn: Minimumtemperatur bei niedrigerem druck <L> (°C)
* TSmx: Verzdigungstemperatur die übereinstimmt mit de maximal zulässigen druck (PS): <P> (°C)
- Kältemittel: <R>

- Instelling van druksicherheidsapparaat: <P> (bar)
- Fabricagenummer en fabricatiejaar: zie naamplaat model
05 - Pression maxima admissible (PS): <P> (bar)
- Température minimum/maximum admissible (TS):
* TSmn: Température minima en l'alto de baja presión: <L> (°C)
* TSmx: Température saturada correspondiente à la presión máxima admissible (PS): <P> (°C)
- Refrigerante: <R>

- Ajuste del presostato de seguridad: <P> (bar)
- Número de fabricación y año de fabricación: consulte la placa de especificaciones técnicas de modelo

CE - DECLARAZIONE DE CONFORMIDADE
CE - ЗАЯВЛЕНИЕ О СОБЛЮДЕНИИ
CE - ÖVERENSSTÄMMELSEERKLÄRING
CE - FÖRSÄKRAN OM ÖVERENSSTÄMMELSE

01 continuation of the página anterior:
02 Fortsetzung der vorherigen Seite:
03 suite de la page précédente:
04 vervolg van vorige pagina:

01 Προδιαγραφές Σχέσεων που αφορά το οποίο:
02 Especificações de projeto dos modelos a que se aplica esta declaração:
03 Проектные характеристики моделей, к которым относится настоящее заявление:
04 Ontwerpspecificaties van de modellen, som denne erklaring vedrører:
05 Especificaciones de diseño de los modelos a los cuales hace referencia esta declaración:
06 Specifiche di progetto dei modelli som berörs av denna deklarasjonen:

10 - Maks. tillat tryk (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Min. temperatur på tryksidans tryk <L> (°C)
* TSmx: Måttat temperatur svarende til maks. tillat tryk (PS): <P> (°C)
- Kjølemiddel: <R>

- Instilling af tryksikkerhedsapparat: <P> (bar)
- Produktionsnummer og fremstillingsår: se modellens bærerskilt
11 - Maksimāli tiliet tryk (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Minimumtemperatūr pā āgrīvkāstān: <L> (°C)
* TSmx: Māximātemperatūr som mōtvarat mōximāli tiliet tryk (PS): <P> (°C)
- Kāļiemēlī: <R>

- Inställning för tryksäkerhetsnetet: <P> (bar)
- Tillverkningsnummer och tillverkningsår: se modellens bärerskilt
12 - Maksimāli tiliet tryk (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Minimumtemperatūr pā āgrīvkāstān: <L> (°C)
* TSmx: Māximātemperatūr pā āgrīvkāstān: <L> (°C)
- Kāļiemēlī: <R>

- Inställing af sikkerhedsanordning for tryk: <P> (bar)
- Produktionsnummer og produktionsår: se modellens bærerskilt
13 - Suurin sallittu paine (PS): <P> (bar)
- Pienin sallittu lämpötilä (TS):
* TSmn: Alhaisin määrittäminen lämpötilä <L> (°C)
* TSmx: Suurin sallittu paine (PS) vastava yläraja lämpötilä: <P> (°C)
- Kylmäaine: <R>

- Varmustemperointien asetus: <P> (bar)
- Varmustemperatuuri valmistusvuosi: katso mallin nimikirjoitus
14 - Maksimāli pļūstān tryk (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Minimumā temperatūra pie zemo drūkstān: <L> (°C)
* TSmx: Sāturovēnā temperatūra atbilstoši maksimāli pļūstān tryk (PS): <P> (°C)
- Kāļiemēlī: <R>

- Ajuste del presostato de seguridad: <P> (bar)
- Número de fabricación y año de fabricación: consulte la placa de especificaciones técnicas de modelo

CE - IZJAVA O SKLADENOSTI
CE - VASTAVUSEKLAARITUS
CE - ДЕКЛАРАЦИЯ О СООТВЕТСТВИИ
CE - DECLARAȚIE DE CONFORMITATE

15 continuation of previous page:
16 edimesa lehekülje järg:
17 page d'après la page précédente:
18 continuación de página anterior:

13 Tähtsimeid tehnikaga seotud andmeid:
14 Declaración de diseño de los modelos a los que se refiere esta declaración:
15 Specificații de proiectare ale modelelor la care se referă această declarație:
16 A plain language description of the model, to which this declaration relates:
17 To model design specifications, in which this declaration relates:
18 Konstrukční specifikace modelu, k němuž se vztahuje tato výhověnost:
19 Specificații de proiectare ale modelelor la care se referă această declarație:
20 Declarații tehnice referitoare la modelele la care se referă această declarație:

15 - Najveći dopušten tlak (PS): <P> (bar)
- Najviša dozvoljena temperatura (TS):
* TSmn: Minimalna temperatura na niskom stranu: <L> (°C)
* TSmx: Saturaona temperatura koju odgovara najvećem dopuštenom tlaku (PS): <P> (°C)
- Hladno: <R>

- Postavne sigurnosne naprave za tlak: <P> (bar)
- Proizvodni broj i godina proizvodnje: pogledajte napisanu pločicu modela
16 - Legnyabb megengedhető nyomás (PS): <P> (bar)
- Legkeiseb megengedhető megengedhető hőmérséklet (TS):
* TSmn: Legkeiseb megengedhető hőmérséklet a kis nyomású oldalon: <L> (°C)
* TSmx: A legnagyobb megengedhető nyomásnak (PS) megfelelő letehető hőmérséklet: <P> (°C)
- Hűtőközeg: <R>

- A lühimäärä-kapselle heallitus: <P> (bar)
- Gättas sām de ovtāvis ēv: āsd a bēndzēsde atdabājān
17 - Maksimāli dopuštān cīspine (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Minimumā temperatūra pā zemo drūkstān: <L> (°C)
* TSmx: Temperatūra pasvārtā atbilstoši maksimāli dopuštān cīspine (PS): <P> (°C)
- Kāļiemēlī: <R>

- Nume fabricator și anul producției: vedeti tabelul de identificare a modelului
18 - Presure maxima admissible (PS): <P> (bar)
- Temperature minimum/maximum admissible (TS):
* TSmn: Temperatură minimă pe partea de presiune joasă: <L> (°C)
* TSmx: Temperatură de saturație corespunzătoare presiunii maxime admissible (PS): <P> (°C)
- Agent frigorific: <R>

- Regieia dispozitivului de siguranță pentru presiune: <P> (bar)
- Numărul de fabricație și anul de fabricație: consultați placa de identificare a modelului
21 - Maksimāli pieļaujamais spiediens (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Minimumā temperatūra zemā spiediena pusē: <L> (°C)
* TSmx: Piešaurā temperatūra atbilstoši maksimāli pieļaujamam spiedienam (PS): <P> (°C)
- Saldinātājs: <R>

- Ajuste del presostato de seguridad: <P> (bar)
- Número de fabricación y año de fabricación: consulte la placa de identificación del modelo
22 - Maksimāli pieļaujamais spiediens (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Minimumā temperatūra zemā spiediena pusē: <L> (°C)
* TSmx: Piešaurā temperatūra atbilstoši maksimāli pieļaujamam spiedienam (PS): <P> (°C)
- Saldinātājs: <R>

CE - ATTIKTES DEKLARACIA
CE - ATTIKTES DEKLARACIA
CE - VYHLAŠENIE ZKODY
CE - UYGUNLILIK BEYANI

22 continuation of previous page:
23 edimesa lehekülje järg:
24 page d'après la page précédente:
25 continuación de página anterior:

21 Deklaratsiooni alla kuuluvate mudelite disainispetsifikatsioonid:
22 Konstruktsioonide kirjeldused, millele see deklaratsioon kehtib:
23 To model design specifications, in which this declaration relates:
24 Konstrukční specifikace modelu, k němuž se vztahuje tato výhověnost:
25 Bu bildirimli ilgili öğdüy modelilerin Tasarım Özellikleri:

21 - Maksimāli dopušten tlak (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Minimalna temperatura na niskom stranu: <L> (°C)
* TSmx: Saturaona temperatura koju odgovara najvećem dopuštenom tlaku (PS): <P> (°C)
- Hladno: <R>

- Postavne sigurnosne naprave za tlak: <P> (bar)
- Proizvodni broj i godina proizvodnje: pogledajte napisanu pločicu modela
22 - Maksimāli pieļaujamais spiediens (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Minimumā temperatūra zemā spiediena pusē: <L> (°C)
* TSmx: Piešaurā temperatūra atbilstoši maksimāli pieļaujamam spiedienam (PS): <P> (°C)
- Saldinātājs: <R>

- Ajuste del presostato de seguridad: <P> (bar)
- Número de fabricación y año de fabricación: consulte la placa de identificación del modelo
23 - Maksimāli pieļaujamais spiediens (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Minimumā temperatūra zemā spiediena pusē: <L> (°C)
* TSmx: Piešaurā temperatūra atbilstoši maksimāli pieļaujamam spiedienam (PS): <P> (°C)
- Saldinātājs: <R>

- Ajuste del presostato de seguridad: <P> (bar)
- Número de fabricación y año de fabricación: consulte la placa de identificación del modelo
24 - Maksimāli pieļaujamais spiediens (PS): <P> (bar)
- Minimum maximum allowable temperature (TS):
* TSmn: Minimumā temperatūra zemā spiediena pusē: <L> (°C)
* TSmx: Piešaurā temperatūra atbilstoši maksimāli pieļaujamam spiedienam (PS): <P> (°C)
- Saldinātājs: <R>

- Ajuste del presostato de seguridad: <P> (bar)
- Número de fabricación y año de fabricación: consulte la placa de identificación del modelo



Yasuto Hiraoka
Managing Director
Pilsen, 1st of October 2020

2P633780-1

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.
U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany,
Czech Republic

VINÇOTTE NV
Jan Oltenslaagerslaan 35
1800 Vilvoorde, Belgium

<K>	PS	46 bar
<L>	TSmin	-30 °C
<M>	TSmax	68 °C
<N>	R32	
<P>		46 bar

01 Name and address of the Notified body that issued positively
02 Name and address of the Notified body that issued positively
03 Name and address of the Notified body that issued positively
04 Name and address of the Notified body that issued positively

05 Name and address of the Notified body that issued positively
06 Name and address of the Notified body that issued positively
07 Name and address of the Notified body that issued positively
08 Name and address of the Notified body that issued positively

09 Name and address of the Notified body that issued positively
10 Name and address of the Notified body that issued positively
11 Name and address of the Notified body that issued positively
12 Name and address of the Notified body that issued positively

13 Name and address of the Notified body that issued positively
14 Name and address of the Notified body that issued positively
15 Name and address of the Notified body that issued positively
16 Name and address of the Notified body that issued positively

17 Name and address of the Notified body that issued positively
18 Name and address of the Notified body that issued positively
19 Name and address of the Notified body that issued positively
20 Name and address of the Notified body that issued positively

21 Name and address of the Notified body that issued positively
22 Name and address of the Notified body that issued positively
23 Name and address of the Notified body that issued positively
24 Name and address of the Notified body that issued positively

25 Name and address of the Notified body that issued positively
26 Name and address of the Notified body that issued positively
27 Name and address of the Notified body that issued positively
28 Name and address of the Notified body that issued positively

29 Name and address of the Notified body that issued positively
30 Name and address of the Notified body that issued positively
31 Name and address of the Notified body that issued positively
32 Name and address of the Notified body that issued positively

33 Name and address of the Notified body that issued positively
34 Name and address of the Notified body that issued positively
35 Name and address of the Notified body that issued positively
36 Name and address of the Notified body that issued positively

37 Name and address of the Notified body that issued positively
38 Name and address of the Notified body that issued positively
39 Name and address of the Notified body that issued positively
40 Name and address of the Notified body that issued positively

41 Name and address of the Notified body that issued positively
42 Name and address of the Notified body that issued positively
43 Name and address of the Notified body that issued positively
44 Name and address of the Notified body that issued positively

45 Name and address of the Notified body that issued positively
46 Name and address of the Notified body that issued positively
47 Name and address of the Notified body that issued positively
48 Name and address of the Notified body that issued positively

49 Name and address of the Notified body that issued positively
50 Name and address of the Notified body that issued positively
51 Name and address of the Notified body that issued positively
52 Name and address of the Notified body that issued positively

53 Name and address of the Notified body that issued positively
54 Name and address of the Notified body that issued positively
55 Name and address of the Notified body that issued positively
56 Name and address of the Notified body that issued positively

57 Name and address of the Notified body that issued positively
58 Name and address of the Notified body that issued positively
59 Name and address of the Notified body that issued positively
60 Name and address of the Notified body that issued positively

61 Name and address of the Notified body that issued positively
62 Name and address of the Notified body that issued positively
63 Name and address of the Notified body that issued positively
64 Name and address of the Notified body that issued positively

65 Name and address of the Notified body that issued positively
66 Name and address of the Notified body that issued positively
67 Name and address of the Notified body that issued positively
68 Name and address of the Notified body that issued positively

69 Name and address of the Notified body that issued positively
70 Name and address of the Notified body that issued positively
71 Name and address of the Notified body that issued positively
72 Name and address of the Notified body that issued positively

73 Name and address of the Notified body that issued positively
74 Name and address of the Notified body that issued positively
75 Name and address of the Notified body that issued positively
76 Name and address of the Notified body that issued positively

77 Name and address of the Notified body that issued positively
78 Name and address of the Notified body that issued positively
79 Name and address of the Notified body that issued positively
80 Name and address of the Notified body that issued positively

Table of contents

1	About this document	8
2	Specific installer safety instructions	8
3	About the box	9
3.1	Outdoor unit.....	9
3.1.1	To handle the outdoor unit.....	9
3.1.2	To remove the accessories from the outdoor unit.....	10
4	Unit installation	10
4.1	Preparing the installation site.....	10
4.1.1	Installation site requirements of the outdoor unit.....	10
4.1.2	Additional installation site requirements of the outdoor unit in cold climates.....	10
4.2	Mounting the outdoor unit.....	11
4.2.1	To provide the installation structure.....	11
4.2.2	To install the outdoor unit.....	12
4.2.3	To provide drainage.....	13
4.2.4	To prevent the outdoor unit from falling over.....	13
4.3	Opening the unit.....	14
4.3.1	To open the outdoor unit.....	14
5	Piping installation	14
5.1	Connecting the refrigerant piping.....	14
5.1.1	To connect the refrigerant piping to the outdoor unit..	14
5.2	Checking the refrigerant piping.....	14
5.2.1	To check for leaks.....	14
5.2.2	To perform vacuum drying.....	14
5.2.3	To insulate the refrigerant piping.....	15
5.3	Charging refrigerant.....	15
5.3.1	To determine the additional refrigerant amount.....	15
5.3.2	To charge additional refrigerant.....	15
5.3.3	To fix the fluorinated greenhouse gases label.....	15
6	Electrical installation	15
6.1	About electrical compliance.....	15
6.2	Specifications of standard wiring components.....	15
6.3	Guidelines when connecting the electrical wiring.....	16
6.4	Connections to the outdoor unit.....	16
6.4.1	To connect the electrical wiring to the outdoor unit.....	16
7	Starting up the outdoor unit	16
8	Technical data	17
8.1	Piping diagram: Outdoor unit.....	17
8.2	Wiring diagram: Outdoor unit.....	18

1 About this document

Target audience

Authorised installers

Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
 - Safety instructions that you must read before installing
 - Format: Paper (in the box of the indoor unit)
- **Operation manual:**
 - Quick guide for basic usage
 - Format: Paper (in the box of the indoor unit)

- **User reference guide:**
 - Detailed step-by-step instructions and background information for basic and advanced usage
 - Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>
- **Installation manual – Outdoor unit:**
 - Installation instructions
 - Format: Paper (in the box of the outdoor unit)
- **Installation manual – Indoor unit:**
 - Installation instructions
 - Format: Paper (in the box of the indoor unit)
- **Installer reference guide:**
 - Preparation of the installation, good practices, reference data, ...
 - Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>
- **Addendum book for optional equipment:**
 - Additional info about how to install optional equipment
 - Format: Paper (in the box of the indoor unit) + Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

The original documentation is written in English. All other languages are translations.

Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

2 Specific installer safety instructions

Always observe the following safety instructions and regulations.

Handling the unit ("3.1.1 To handle the outdoor unit" [p 9])



CAUTION

To avoid injury, do NOT touch the air inlet or aluminium fins of the unit.

Installation site (see "4.1 Preparing the installation site" [p 10])



WARNING

Follow the service space dimensions in this manual for correct installation of the unit. See "4.1.1 Installation site requirements of the outdoor unit" [p 10].



WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).

Mounting the outdoor unit (see "4.2 Mounting the outdoor unit" [p 11])



WARNING

Fixing method of the outdoor unit MUST be in accordance with the instructions from this manual. See "4.2 Mounting the outdoor unit" [p 11].



CAUTION

Do NOT remove the protective cardboard before the unit is installed properly.

Opening and closing the unit (see ["4.3 Opening the unit"](#) [p 14])



DANGER: RISK OF ELECTROCUTION

Do NOT leave the unit unattended when the service cover is removed.



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING/SCALDING

Piping installation (see ["5 Piping installation"](#) [p 14])



DANGER: RISK OF BURNING/SCALDING



WARNING

If the total refrigerant charge in the system is ≥ 1.84 kg (i.e. if the piping length is ≥ 27 m), you need to comply with the minimum floor area requirements for the indoor unit. For more information, see the indoor unit installation manual.



WARNING

- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.

Electrical installation (see ["6 Electrical installation"](#) [p 15])



WARNING

Electrical wiring connection method MUST be in accordance with the instructions from:

- This manual. See ["6 Electrical installation"](#) [p 15].
- The wiring diagram of the outdoor unit, which is delivered with the unit, located on the inside of the top plate. For a translation of its legend, see ["8.2 Wiring diagram: Outdoor unit"](#) [p 18].



DANGER: RISK OF ELECTROCUTION



WARNING

ALWAYS use multicore cable for power supply cables.



WARNING

- All wiring MUST be performed by an authorised electrician and MUST comply with the applicable legislation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction MUST comply with the applicable legislation.



WARNING

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shock.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do NOT come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do NOT use taped wires, stranded conductor wires, extension cords, or connections from a star system. They can cause overheating, electrical shock or fire.
- Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.



INFORMATION

Details of type and rating of fuses, or rating of circuit breakers are described in ["6 Electrical installation"](#) [p 15].

3 About the box

3.1 Outdoor unit



3.1.1 To handle the outdoor unit



CAUTION

To avoid injury, do NOT touch the air inlet or aluminium fins of the unit.


- Handle the unit using the sling to the left and the handle to the right. Pull up both sides of the sling at the same time to prevent disconnection of the sling from the unit.

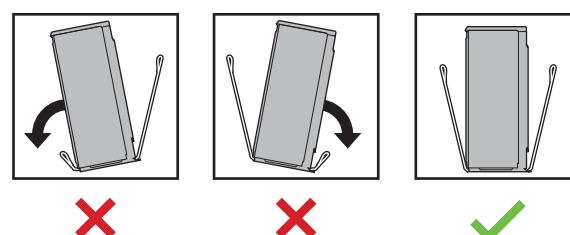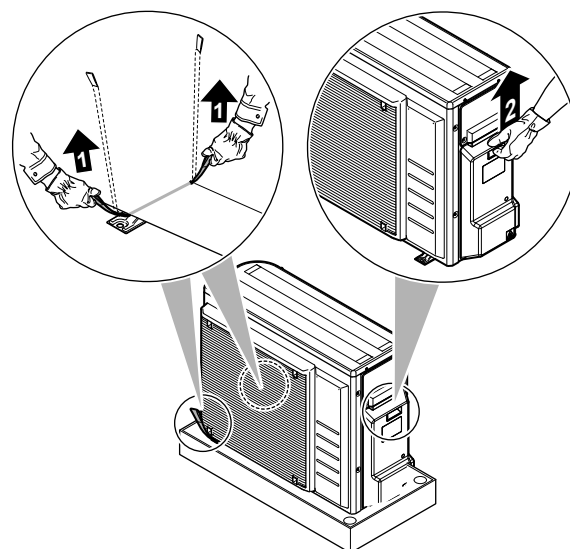

4 Unit installation

2 While handling the unit:



- Keep both sides of the sling level.
- Keep your back straight.

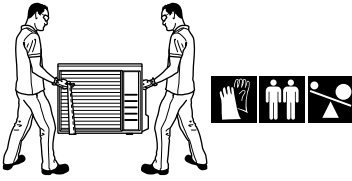

3 After mounting the unit, remove the sling from the unit by pulling 1 side of the sling.

3.1.2 To remove the accessories from the outdoor unit

- 1 Lift the outdoor unit. See "3.1.1 To handle the outdoor unit" [9].
- 2 Remove the accessories at the bottom of the package.

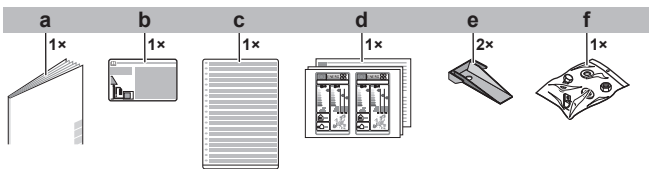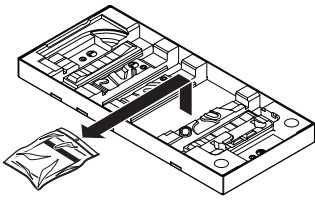

- a Outdoor unit installation manual
- b Fluorinated greenhouse gases label
- c Multilingual fluorinated greenhouse gases label
- d Energy label
- e Unit mounting plate
- f Bolts, nuts, washers, spring washers and wire clamp

4 Unit installation

4.1 Preparing the installation site




WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).

4.1.1 Installation site requirements of the outdoor unit

Mind the following spacing guidelines:

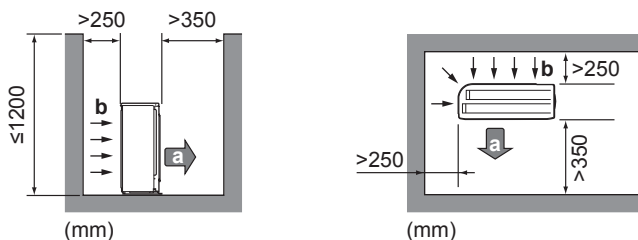


- a Air outlet
- b Air inlet



INFORMATION

In sound sensitive areas (e.g. near a bedroom), you can install the low sound cover (EKLN08A1) to decrease the operation noise of the outdoor unit. If you install it, mind the following spacing guidelines:

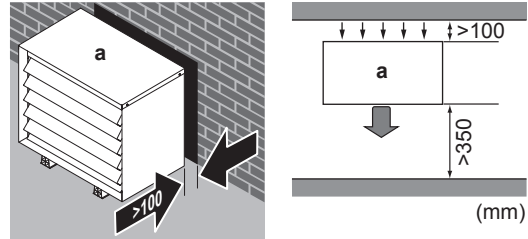

a Low sound cover

The outdoor unit is designed for outdoor installation only, and for the following ambient temperatures:


Cooling mode	10~43°C
Heating mode	-25~25°C

4.1.2 Additional installation site requirements of the outdoor unit in cold climates

In areas with low ambient temperatures and high humidity, or in areas with heavy snowfall, remove the suction grille to ensure proper operation.


Non-exhaustive list of areas: Austria, Czech Republic, Denmark, Estonia, Finland, Germany, Hungary, Latvia, Lithuania, Norway, Poland, Romania, Serbia, Slovakia, Sweden, ...

- 1 Remove the screws holding the suction grille.
- 2 Remove the suction grille, and dispose of it.
- 3 Reattach the screws to the unit.

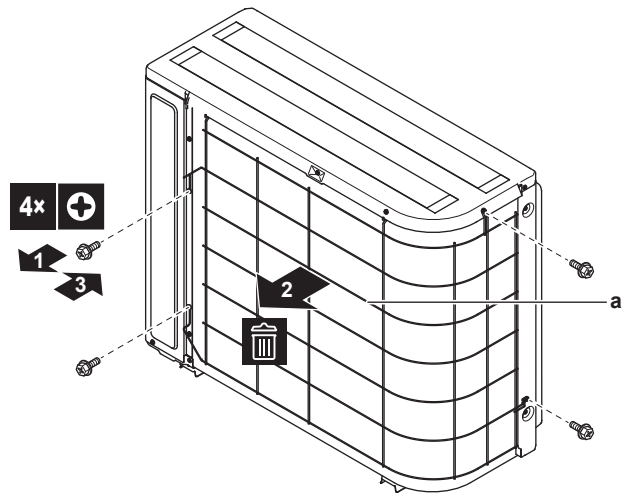

a Suction grille

Protect the outdoor unit against direct snowfall and take care that the outdoor unit is NEVER snowed up.

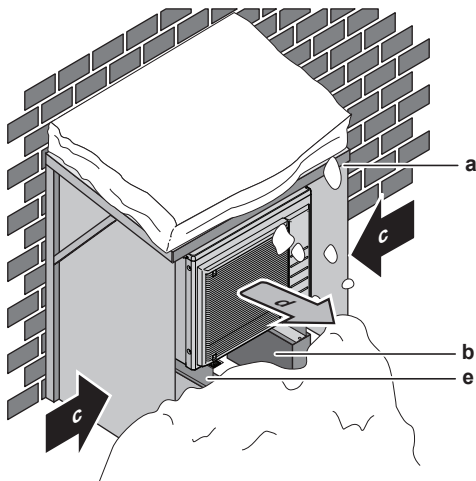

- a Snow cover or shed
- b Pedestal
- c Prevailing wind direction
- d Air outlet
- e EKFT008D option kit

In any case, provide at least 300 mm of free space below the unit. Additionally, make sure the unit is positioned at least 100 mm above the maximum expected level of snow. See "4.2 Mounting the outdoor unit" [▶ 11] for more details.

In heavy snowfall areas it is very important to select an installation site where the snow will NOT affect the unit. If lateral snowfall is possible, make sure that the heat exchanger coil is NOT affected by the snow. If necessary, install a snow cover or shed and a pedestal.

4.2 Mounting the outdoor unit

4.2.1 To provide the installation structure


This topic shows different installation structures. For all, use 4 sets of M8 or M10 anchor bolts, nuts and washers. In any case, provide at least 300 mm of free space below the unit. Additionally, make sure the unit is positioned at least 100 mm above the maximum expected level of snow.

i INFORMATION

The maximum height of the upper protruding part of the bolts is 15 mm.


i INFORMATION

If you install the U-beams in combination with the low sound cover (EKLN08A1), different installation instructions apply for the U-beams. See the installation manual of the low sound cover.

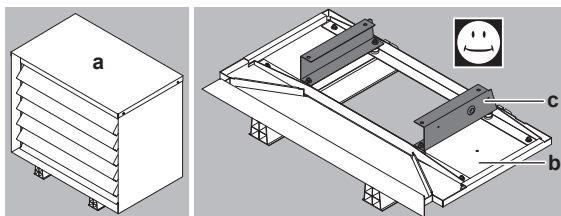

- a Low sound cover
- b Bottom parts of the low sound cover
- c U-beams

Option 1: On mounting feet "flexi-foot with strut"

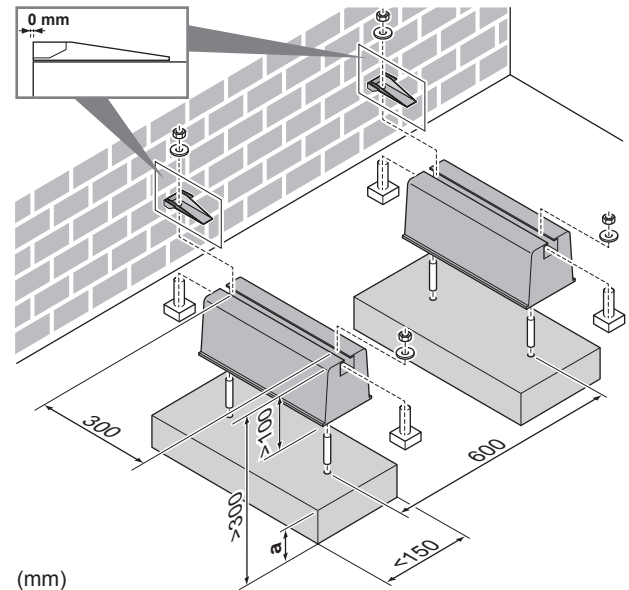


(mm)

a Maximum snowfall height

Option 2: On plastic mounting feet


In this case, you can use the bolts, nuts, washers and spring washers delivered with the unit as accessories.

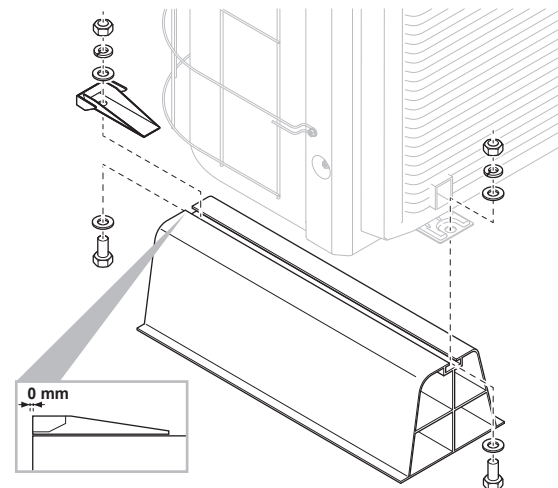

Option 3: On a pedestal with the EKFT008D option kit

The EKFT008D option kit is recommended in areas with heavy snowfall.

4 Unit installation

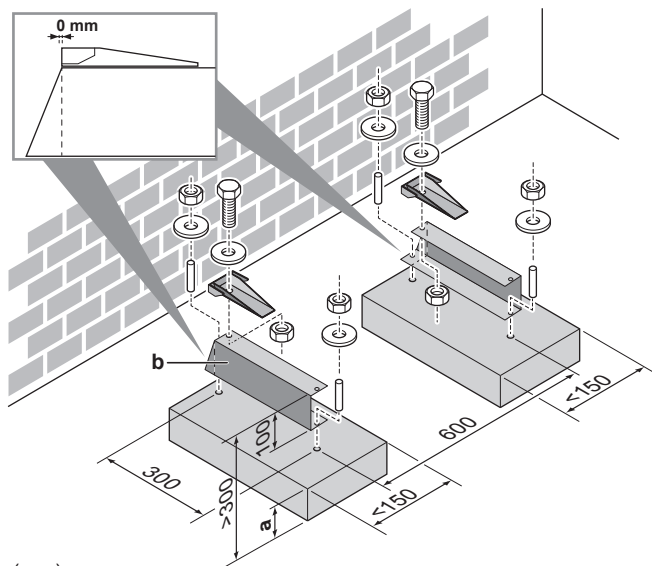


(mm)

- a Maximum snowfall height
- b EKFT008D option kit


Option 4: On brackets to the wall with the EKFT008D option kit

The EKFT008D option kit is recommended in areas with heavy snowfall.

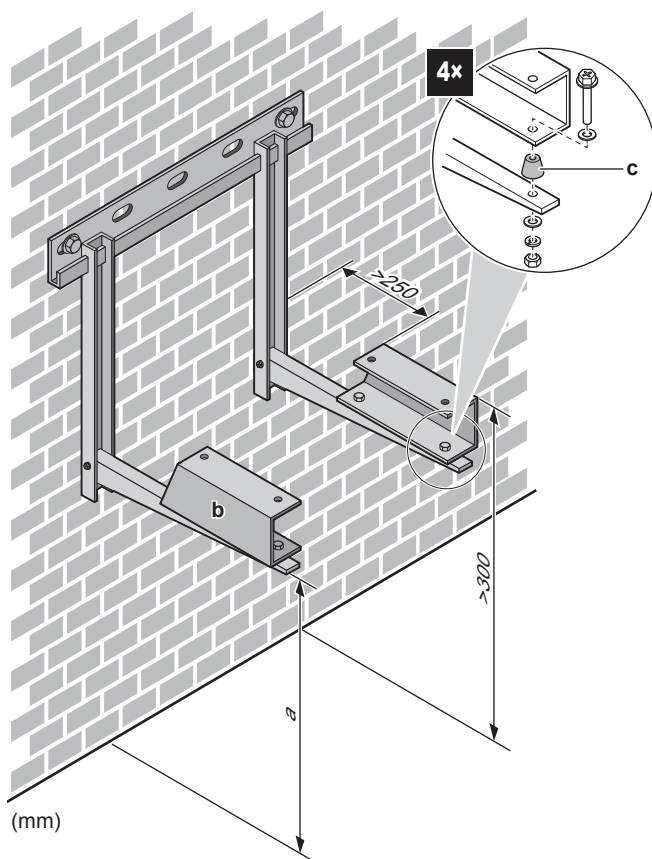

(mm)

- a Maximum snowfall height
- b EKFT008D option kit
- c Anti-vibration rubber (field supply)

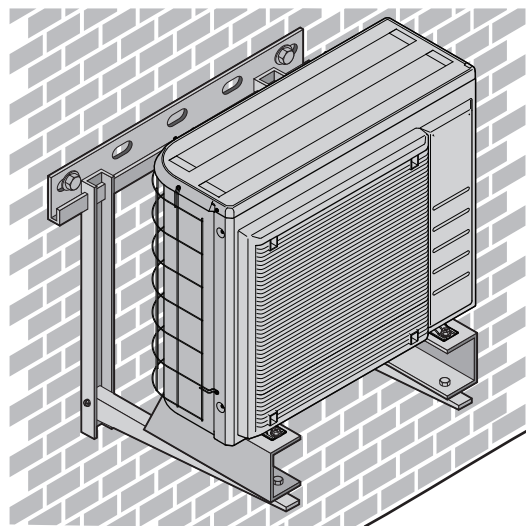


4.2.2 To install the outdoor unit



CAUTION

Do NOT remove the protective cardboard before the unit is installed properly.

- 1 Lift the outdoor unit as described in "3.1.1 To handle the outdoor unit" [p. 9].
- 2 Install the outdoor unit as follows:
 - (1) Put the unit into position (using the sling to the left and the handle to the right).
 - (2) Remove the sling (by pulling 1 side of the sling).
 - (3) Fix the unit.

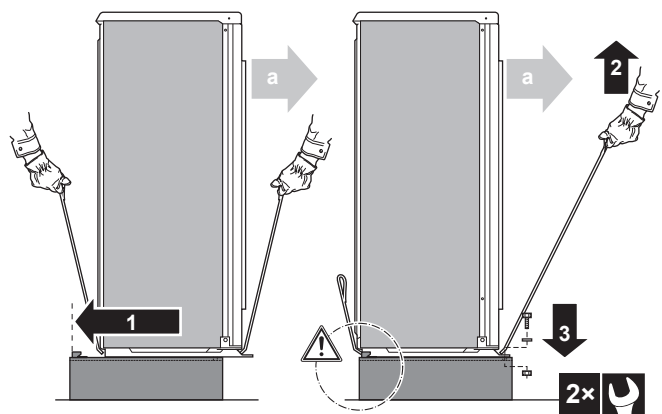


a Air outlet



NOTICE

Properly align the unit. Make sure the backside of the unit does NOT protrude.

- 3 Remove the protective cardboard and instruction sheet.

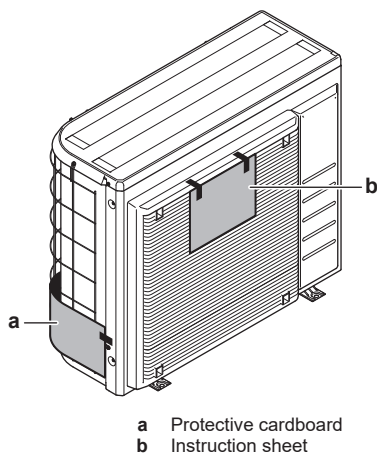

4.2.3 To provide drainage



Make sure that condensation water can be evacuated properly.



NOTICE

If the drain holes of the outdoor unit are blocked up, provide space of at least 300 mm below the outdoor unit.

- **Drain pan.** You can use the drain pan option (EKDP008D) to gather the drain water. For the complete installation instructions, see the installation manual of the drain pan. In short, the drain pan must be installed level (with a tolerance of 1° at all sides) and as follows:

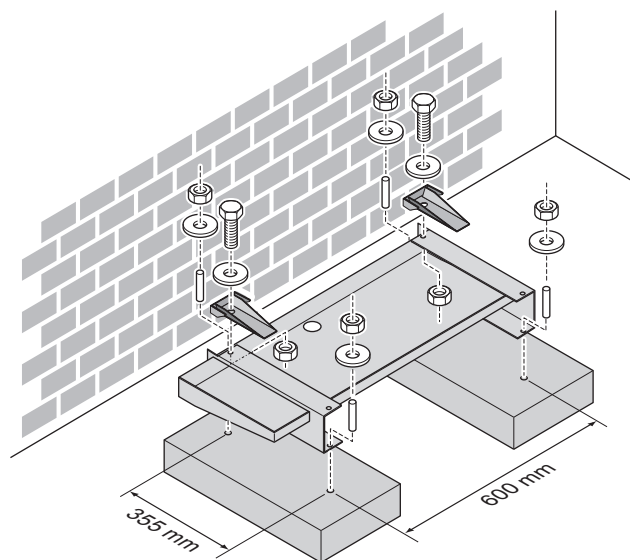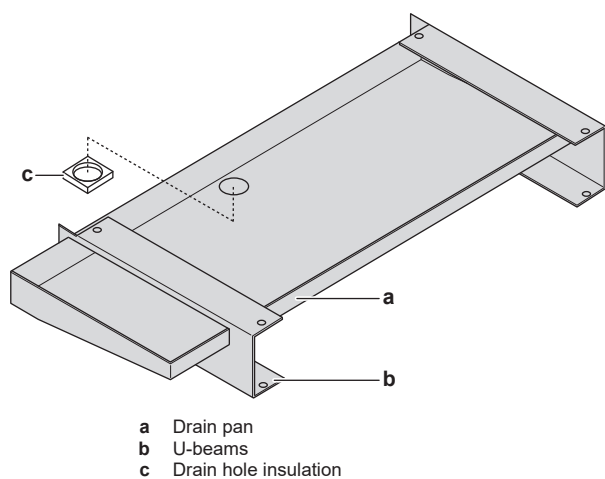


- **Drain pan heater.** You can use the drain pan heater option (EKDPH008CA) to prevent freezing-up of the drain pan. For the installation instructions, see the installation manual of the drain pan heater.
- **Non-heated drain tube.** When using the drain pan heater without drain tube or with a non-heated drain tube, remove the drain hole insulation (Item c on the illustration).



INFORMATION

If you install the drain pan kit (with or without drain pan heater) in combination with the low sound cover (EKLN08A1), different installation instructions apply for the drain pan kit. See the installation manual of the low sound cover.

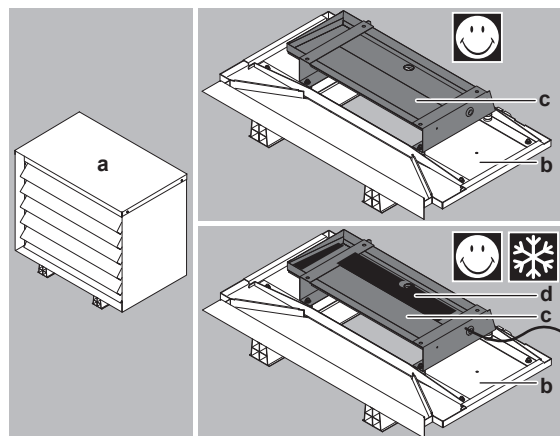


- a Low sound cover
- b Bottom parts of the low sound cover
- c Drain pan kit
- d Drain pan heater

4.2.4 To prevent the outdoor unit from falling over

In case the unit is installed in places where strong wind can tilt the unit, take following measure:

- 1 Prepare 2 cables as indicated in the following illustration (field supply).
- 2 Place the 2 cables over the outdoor unit.
- 3 Insert a rubber sheet between the cables and the outdoor unit to prevent the cables from scratching the paint (field supply).
- 4 Attach the ends of the cables.
- 5 Tighten the cables.

5 Piping installation

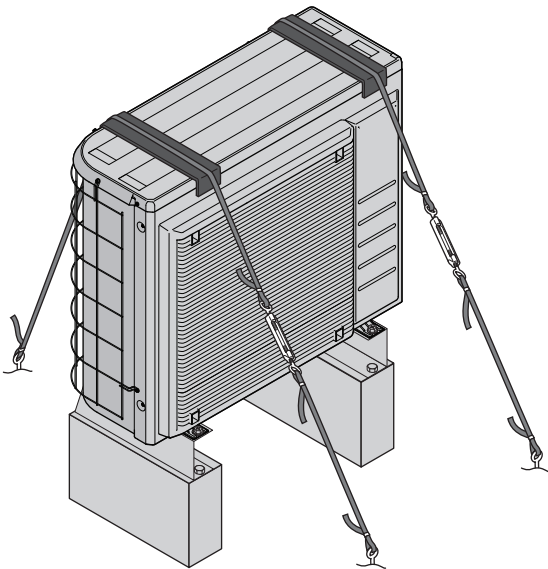

4.3 Opening the unit

4.3.1 To open the outdoor unit



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING/SCALDING

See "5.1.1 To connect the refrigerant piping to the outdoor unit" [▶ 14] and "6.4.1 To connect the electrical wiring to the outdoor unit" [▶ 16].

5 Piping installation



5.1 Connecting the refrigerant piping



DANGER: RISK OF BURNING/SCALDING

5.1.1 To connect the refrigerant piping to the outdoor unit

- 1 Connect the liquid refrigerant connection from the indoor unit to the liquid stop valve of the outdoor unit.

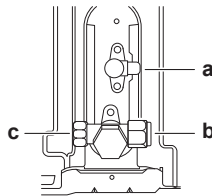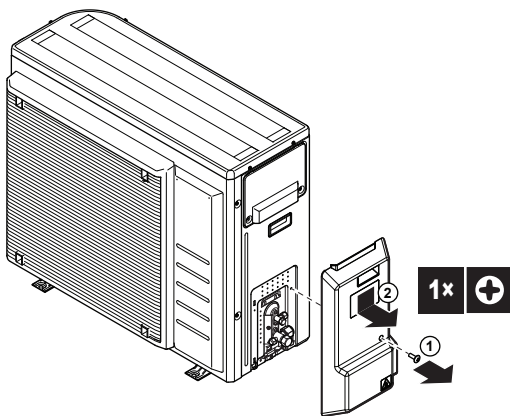

- a Liquid stop valve
- b Gas stop valve
- c Service port

- 2 Connect the gas refrigerant connection from the indoor unit to the gas stop valve of the outdoor unit.



NOTICE

It is recommended that the refrigerant piping between indoor and outdoor unit is installed in a ducting or the refrigerant piping is wrapped with finishing tape.

5.2 Checking the refrigerant piping

5.2.1 To check for leaks



NOTICE

Do NOT exceed the unit's maximum working pressure (see "PS High" on the unit name plate).



NOTICE

ALWAYS use a recommended bubble test solution from your wholesaler.

NEVER use soap water:

- Soap water may cause cracking of components, such as flare nuts or stop valve caps.
- Soap water may contain salt, which absorbs moisture that will freeze when the piping gets cold.
- Soap water contains ammonia which may lead to corrosion of flared joints (between the brass flare nut and the copper flare).

- 1 Charge the system with nitrogen gas up to a gauge pressure of at least 200 kPa (2 bar). It is recommended to pressurize to 3000 kPa (30 bar) in order to detect small leaks.
- 2 Check for leaks by applying the bubble test solution to all connections.
- 3 Discharge all nitrogen gas.

5.2.2 To perform vacuum drying

- 1 Vacuum the system until the pressure on the manifold indicates -0.1 MPa (-1 bar).
- 2 Leave as is for 4-5 minutes and check the pressure:

If the pressure...	Then...
Does not change	There is no moisture in the system. This procedure is finished.
Increases	There is moisture in the system. Go to the next step.

- 3 Vacuum the system for at least 2 hours to a manifold pressure of -0.1 MPa (-1 bar).
- 4 After turning the pump OFF, check the pressure for at least 1 hour.
- 5 If you do NOT reach the target vacuum or CANNOT maintain the vacuum for 1 hour, do the following:
 - Check for leaks again.
 - Perform vacuum drying again.



NOTICE


Make sure to open the stop valves after installing the refrigerant piping and performing vacuum drying. Running the system with the stop valves closed may break the compressor.

5.2.3 To insulate the refrigerant piping

After finishing the leak test and vacuum drying, the piping must be insulated. Take into account the following points:

- Be sure to insulate the liquid and gas piping (for all units).
- Use heat resistant polyethylene foam which can withstand a temperature of 70°C for liquid piping and polyethylene foam which can withstand a temperature of 120°C for gas piping.
- Reinforce the insulation on the refrigerant piping according to the installation environment.

- 1 Insulate and fix the refrigerant piping and cables as follows:

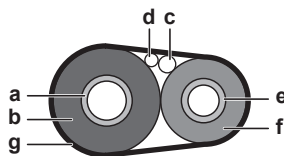

- a Gas pipe
- b Gas pipe insulation
- c Interconnection cable
- d Field wiring (if applicable)
- e Liquid pipe
- f Liquid pipe insulation
- g Finishing tape

- 2 Install the service cover.

5.3 Charging refrigerant

5.3.1 To determine the additional refrigerant amount



WARNING

If the total refrigerant charge in the system is ≥ 1.84 kg (i.e. if the piping length is ≥ 27 m), you need to comply with the minimum floor area requirements for the indoor unit. For more information, see the indoor unit installation manual.

If the total liquid piping length is...	Then...
≤ 10 m	Do NOT add additional refrigerant.
> 10 m	$R = (\text{total length (m) of liquid piping} - 10) \times 0.020$ $R = \text{Additional charge (kg) (rounded in units of 0.01 kg)}$



INFORMATION

Piping length is the one-way length of liquid piping.

5.3.2 To charge additional refrigerant



WARNING


- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.

Prerequisite: Before charging refrigerant, make sure the refrigerant piping is connected and checked (leak test and vacuum drying).

- 1 Connect the refrigerant cylinder to the service port.
- 2 Charge the additional refrigerant amount.
- 3 Open the gas stop valve.

5.3.3 To fix the fluorinated greenhouse gases label

- 1 Fill in the label as follows:

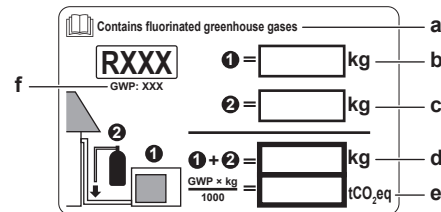

- a If a multilingual fluorinated greenhouse gases label is delivered with the unit (see accessories), peel off the applicable language and stick it on top of a.
- b Factory refrigerant charge: see unit name plate
- c Additional refrigerant amount charged
- d Total refrigerant charge
- e **Quantity of fluorinated greenhouse gases** of the total refrigerant charge expressed as tonnes CO₂ equivalent.
- f GWP = Global warming potential



NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.

Formula to calculate the quantity in CO₂ equivalent tonnes: GWP value of the refrigerant \times total refrigerant charge [in kg] / 1000

Use the GWP value mentioned on the refrigerant charge label.

- 2 Fix the label on the inside of the outdoor unit near the gas and liquid stop valves.

6 Electrical installation



DANGER: RISK OF ELECTROCUTION



WARNING

ALWAYS use multicore cable for power supply cables.

6.1 About electrical compliance

Only for ERGA04EAV3, ERGA06EAV3H and ERGA08EAV3H (not for ERGA04~08EAV3A)

Equipment complying with EN/IEC 61000-3-12 (European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current > 16 A and ≤ 75 A per phase.).

6.2 Specifications of standard wiring components

Component		ERGA04EAV3 ERGA06EAV3H	ERGA08EAV3H	ERGA04~08EAV3A
Power supply cable	MCA ⁽⁶⁾	19.9 A	24.0 A	15.9 A
	Voltage	230 V		
	Phase	1~		
	Frequency	50 Hz		
	Wire sizes	Must comply with applicable legislation		

7 Starting up the outdoor unit

Component	ERGA04EAV3 ERGA06EAV3H	ERGA08EAV3H	ERGA04-08EAV3A
Interconnection cable	Minimum cable section of 1.5 mm ² and applicable for 230 V		
Recommended field fuse	20 A	25 A	16 A
Earth leakage circuit breaker	Must comply with applicable legislation		

^(a) MCA=Minimum circuit ampacity. Stated values are maximum values (see electrical data of combination with indoor units for exact values).

6.3 Guidelines when connecting the electrical wiring

Tightening torques

Outdoor unit:


Item	Tightening torque (N•m)
M4 (X1M)	1.2~1.5
M4 (earth)	

6.4 Connections to the outdoor unit


Item	Description
Power supply cable	See "6.4.1 To connect the electrical wiring to the outdoor unit" ▶ 16].
Interconnection cable	

6.4.1 To connect the electrical wiring to the outdoor unit


- 1 Remove the switch box cover.

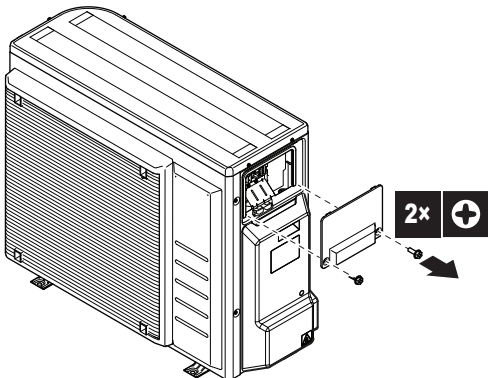


- 2 Remove the refrigerant piping cover.

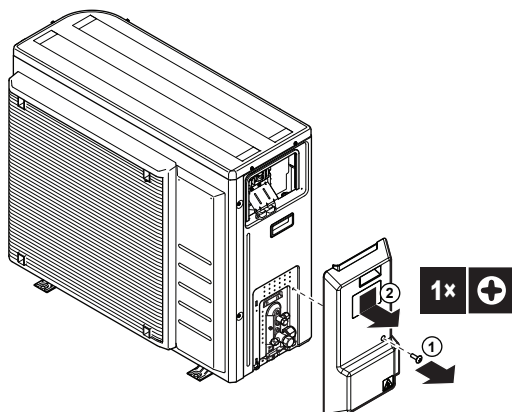

- 3 Connect the interconnection cable and power supply as follows. Ensure stress relief by using the wire clamp.

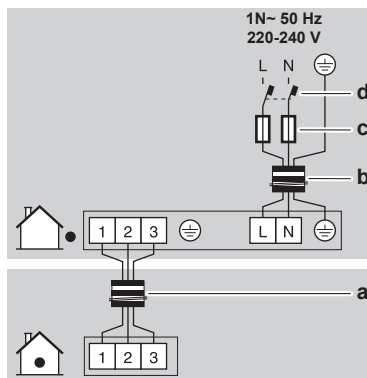


- a Interconnection cable
- b Power supply cable
- c Fuse
- d Earth leakage circuit breaker

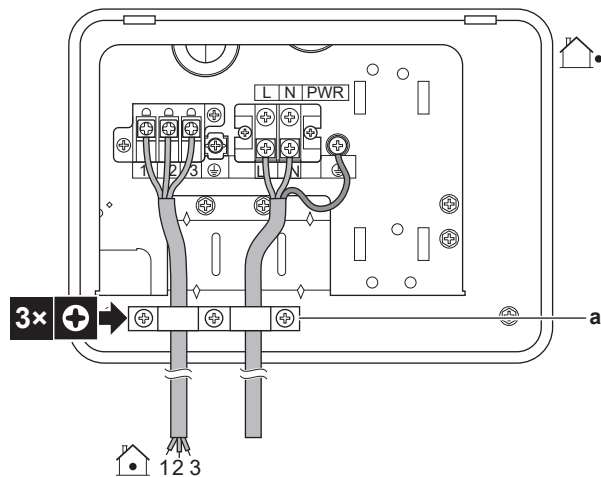

- a Wire clamp

- 4 Reattach the switch box cover.
- 5 Reattach the refrigerant piping cover. Make sure the cables are routed under the cover as shown:

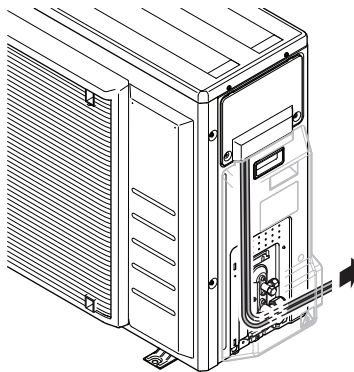

- 6 Connect an earth leakage circuit breaker and fuse to the power supply line.


7 Starting up the outdoor unit

See the indoor unit installation manual for configuration and commissioning of the system.

8 Technical data

A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible). The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

8.1 Piping diagram: Outdoor unit

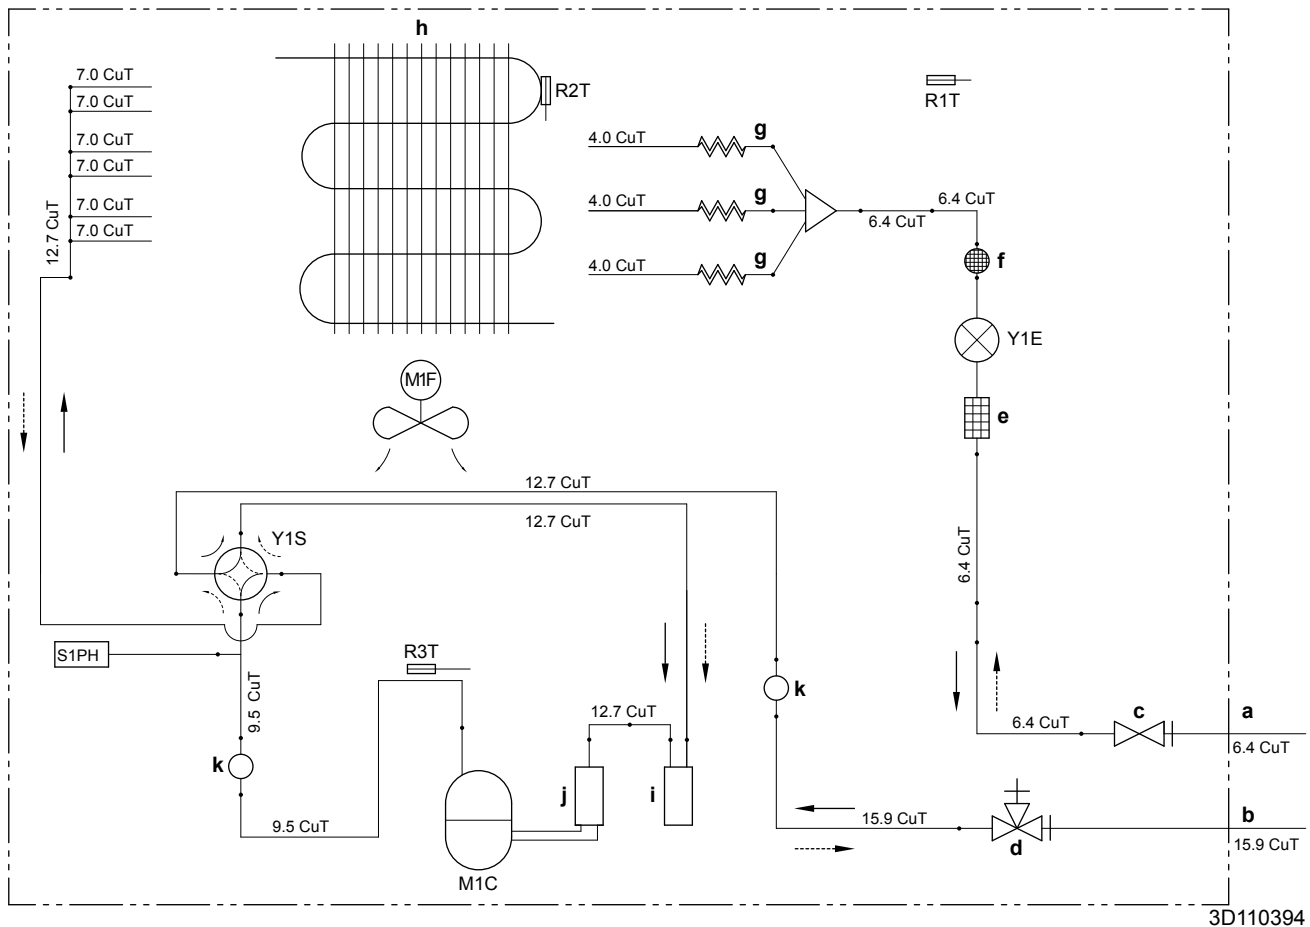

3D110394

- a Field piping (liquid: Ø6.4 mm flare connection)
- b Field piping (gas: Ø15.9 mm flare connection)
- c Stop valve (liquid)
- d Stop valve with service port (gas)
- e Filter
- f Muffler with filter
- g Capillary tube
- h Heat exchanger
- i Accumulator
- j Compressor accumulator
- k Muffler

- M1C Compressor
- M1F Fan
- R1T Thermistor (outdoor air)
- R2T Thermistor (heat exchanger)
- R3T Thermistor (compressor discharge)
- S1PH High pressure switch (automatic reset)
- Y1E Electronic expansion valve
- Y1S Solenoid valve (4-way valve)(ON: cooling)
- Heating
- Cooling

8 Technical data


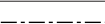

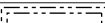

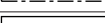
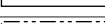


8.2 Wiring diagram: Outdoor unit

See the internal wiring diagram supplied with the unit (on the inside of the top plate). The abbreviations used are listed below.

(1) Connection diagram

English	Translation
Connection diagram	Connection diagram

(2) Notes

English	Translation
Notes	Notes
	Connection
X1M	Main terminal
	Earth wiring
	Field supply
	Option
	Switch box
	PCB
	Wiring depending on model
	Protective earth
	Field wire

S	Connector
S1PH	High pressure switch
S2~80	Connector
SA1	Surge arrester
SHM	Terminal strip fixed plate
U, V, W	Connector
V3, V4, V401	Varistor
X*A	Connector
X*M	Terminal strip
Y1E	Electronic expansion valve
Y1S	Solenoid valve (4-way valve)
Z*C	Noise filter (ferrite core)
Z*F	Noise filter

* Optional
Field supply

NOTES:

- 1 When operating, do not short-circuit protection device S1PH.
- 2 Refer to the combination table and the option manual for how to connect the wiring to X6A, X28A and X77A.
- 3 Colours: BLK: black; RED: red; BLU: blue; WHT: white; GRN: green; YLW: yellow

(3) Legend

AL*	Connector
C*	Capacitor
DB*	Rectifier bridge
DC*	Connector
DP*	Connector
E*	Connector
F1U	Fuse T 6.3 A 250 V
FU1, FU2	Fuse T 3.15 A 250 V
FU3	Fuse T 30 A 250 V
H*	Connector
IPM*	Intelligent power module
L	Connector
LED 1~5	Indication lamp
LED A	Pilot lamp
L*	Reactor
M1C	Compressor motor
M1F	Fan motor
MR*	Magnetic relay
N	Connector
PCB1	Printed circuit board (main)
PS	Switching power supply
Q1L	Thermal protector
Q1DI	# Earth leakage circuit breaker
Q*	Insulated gate bipolar transistor (IGBT)
R1T	Thermistor (air)
R2T	Thermistor (heat exchanger)
R3T	Thermistor (discharge)
RTH2	Resistor



ERC



4P629079-1 C 00000005

Copyright 2020 Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P629079-1C 2021.11